OCUTECH® Sight Enhancement Technology

Determining Telescope Eyepiece Position (VES-Mini or Reveal)

November 2025

1. **Attach** the Demonstrator clip to the front of the patient's eyeglass frame.
2. **Align** the device by sliding it right or left until the patient sees a full, round field of view while looking straight ahead through the telescope.
3. **Confirm** the preferred position with the patient.
4. **Measure** the monocular PD by removing the glasses (without moving the clip) and using a PD ruler to measure from the eyepiece center to the bridge center.
5. **Repeat** for the other eye if a binocular prescription is needed.
6. **Specify** the bioptic placement:
    1. Adjust the nosepads so that the bottom of the eyepiece aligns with the top of the pupil.
    2. Standard positioning is 10 mm from the top of the carrier lens with a 10° upward viewing angle (from horizontal).

Note: When using the clip-on method, the patient's field of view will be narrower than with the final through-the-lens prescription.

Ocutech recommends a minimum 3.0 thickness **Trivex** lens material for all through-the-lens bioptic systems.

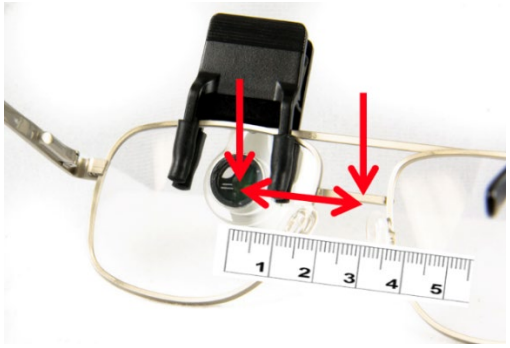

©OCUTECH 2025